


REMOTE CONTROL OVERVIEW

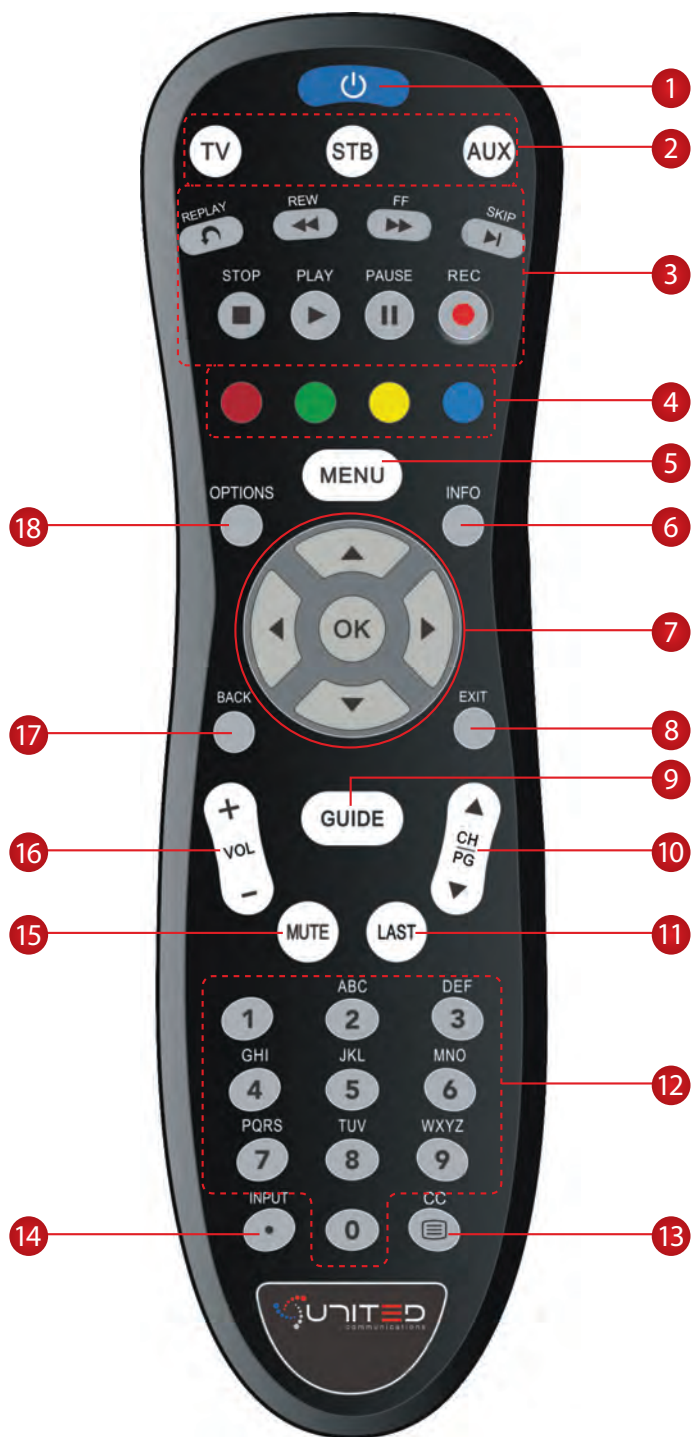

Button(s)	Description
1 POWER	Switches the power on/off for the currently selected device Switches STB to power on or standby mode
2 DEVICE CONTROL	TV: Select to control TV (if programmed) STB: This button is pre-programmed to control the Entone device AUX: Select to control another device (if programmed)
3 TRANSPORT KEYS	Controls video program for LIVE TV / DVR / VOD REPLAY: Goes back approx. 30 seconds REW: Rewinds video FF: Fast forwards video SKIP: Advances ahead in 30 second increments REC: Starts or stops recording a program PAUSE: Pauses video PLAY: Plays video or resumes a paused program STOP: Stops playback of video
4 SHORTCUT	Red button displays DVR Main Menu
5 MENU	Displays on-screen menu or home screen
6 INFO	Displays on-screen information about the current TV / VOD / DVR program
7 NAVIGATION	ARROW KEYS: Navigates up, down, left and right within the on-screen guide or menus OK: Executes the currently selected menu option
8 EXIT	Exits the current menu item or back to LIVE TV
9 GUIDE	Displays the on-screen program guide
10 CH/PG	Changes channel up/down or pages up/down within the on-screen program guide
11 LAST	Changes channel to the previously viewed channel
12 NUMBER KEYS	Allows direct access to specific channels and menu items
13 CC	Toggles closed captioning on/off
14 INPUT	Changes the current A/V input of the selected device programmed (i.e. TV or AUX) May be used when entering a period in certain channels Displays on-screen keyboard for certain applications
15 MUTE	Turns the volume of the currently selected device on/off
16 VOL +/-	Increases or decreases volume of the currently selected device
17 BACK	Goes back one level within menus
18 OPTIONS	Provides additional options for certain on-screen menu or highlighted item